


COOL CAP

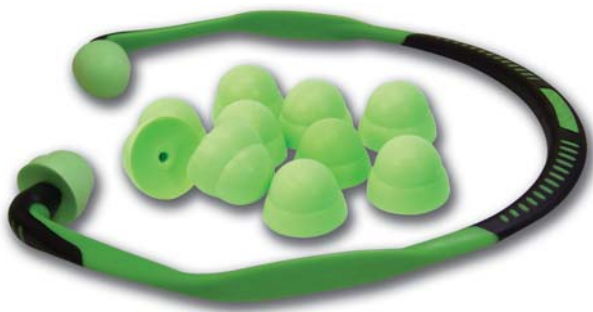

THE COMFORTABLE, COST EFFECTIVE ALTERNATIVE TO EARMUFFS

The lightweight Cool Cap® has two flexible arms that distribute pressure evenly for a comfortable fit. The soft foam pods gently cap the ear canal. Dual contrasting materials on the band give the Cool Cap® a fun look. The low pressure design and soft foam pods make the Cool Cap® great for workers who need to wear a band frequently in moderate noise areas. NRR 22 (Under-the-Chin). 100% PVC-Free.



FEATURES

- 100% PVC-Free.
- A cooler and lighter alternative to earmuffs.
- Two flexible arms for less pressure and increased comfort.
- Cool design that workers want to wear.
- NRR 22 (Under-the-Chin).
- Greater comfort and fit for increased compliance and convenience.
- Soft foam pods gently cap the ear canal.
- Lightweight design increases comfort.
- Soft over-molded plastic helps reduce sound transmission.
- The bright green color is a trademark of Moldex-Metric, Inc.
- Cool Cap® is independently tested to ANSI S3.19-1974 by Michael & Associates, Inc.
- Cool Cap® is the ideal choice for intermittent usage.





MEAN ATTENUATION DATA OF COOL CAP®

Frequency (Hz)	125	250	500	1000	2000	3150	4000	6300	8000	Under-The-Chin		
Real Ear Attenuation (dB)	26.2	25.7	25.9	26.7	34.0	41.8	40.9	43.3	42.8		NRR 22	CSA BL
Standard Deviation (dB)	4.0	4.5	3.0	3.3	3.3	4.3	3.7	3.0	2.2			

Independently tested in accordance with ANSI S3.19-1974 by Michael & Assoc., Inc. State College, PA. EPA Noise Reduction Rating 22 decibels.

WARNING TO USER

1. Use this laboratory-derived attenuation data for comparison purposes only. The amount of protection afforded in field use often is significantly lower depending on how the protectors are fitted and worn.
2. Failure to follow all instructions could result in hearing loss or injury. Failure to obtain a proper fit will reduce effectiveness of hearing protectors and could result in hearing loss or injury.
3. The amount of protection will be reduced if band becomes damaged, cracked, distorted, or loses tension; or pods become worn, torn or misshapen. Replace with a new Cool Cap or pods as appropriate.
4. Over protection can be dangerous. The wearer must be able to hear warning signals.
5. Wearers with hearing loss should exercise extreme caution.
6. It is the employer's responsibility to ensure that the type of hearing protector and its NRR is appropriate for the user in their particular workplace.
7. Failure to follow these warnings could result in serious injury or death.

PACKAGING

6508, Cool Cap® Hearing Band

10 Bands per Box
5 Boxes per Case

6509, Cool Cap® Replacement Pods

5 Pairs per Bag
50 Bags per Case

LIMITED WARRANTY IMPORTANT NOTICE TO PURCHASER

This limited warranty is made in lieu of the warranties of merchantability, fitness for particular purposes and all other warranties, express or implied. There are no other warranties which extend beyond the description on the face hereof. The physical standards and specifications of Moldex will be met by products sold. **Exclusive Remedies:** damages for the breach of this limited warranty are limited to the replacement of such quantity of Moldex products proved to be defectively manufactured. Except as provided above, Moldex shall not be liable or responsible for any loss, damages, or liability, direct, indirect, incidental, special or consequential, arising out of a sale, use or misuse, or the inability to use products by the user.

DISTRIBUTED BY:

MOLDEX-METRIC, INC.

10111 W. Jefferson Blvd., Culver City, CA 90232
TEL +1 (800) 421-0668 or +1 (310) 837-6500 FAX +1 (310) 837-9563
e-mail: sales@moldex.com www.moldex.com

CANADIAN CUSTOMER SERVICE

TEL: +1 (310) 837-6500, ext. 517
FAX: +1 (310) 837-9563

Moldex Technical Service Department: +1 (800) 421-0668 ext. 512/550 or +1 (310) 837-6500 ext. 512/550

Moldex, Ideas that wear well and Cool Cap are registered trademarks. The bright green color is a trademark of Moldex-Metric, Inc. Made in U.S.A. U.S. Patents #D512,141 and #5,829,062. 9702-750 REV B 08/08



Printed on Recycled Paper



MOLDEX
Ideas that wear well.