

MOLDEX

Ideas that wear well.


7000/9000 Fitting Instructions & Selection Guide

7000 SERIES HALF MASK


7000/9000 CARTRIDGES & FILTERS

9000 SERIES FULL FACE


STANDARD LOCK DOWN MODE

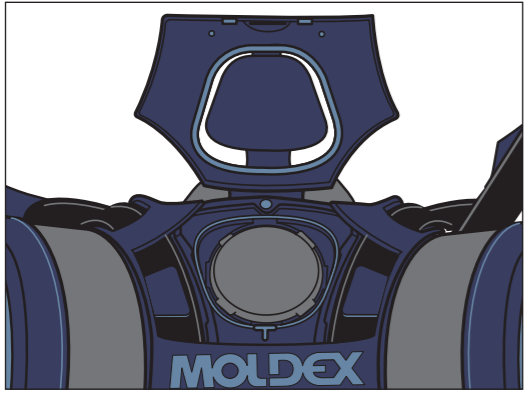


To lock the straps in position, open the valve cover by pulling up on the latch. Position straps underneath the tabs of the strap channel. Close and snap shut the valve cover.

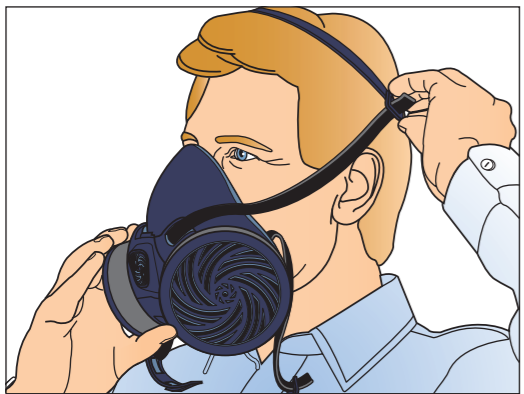

First adjust head cradle then place respirator under the chin and pull the cradle to the top of the head so it rests on the crown.

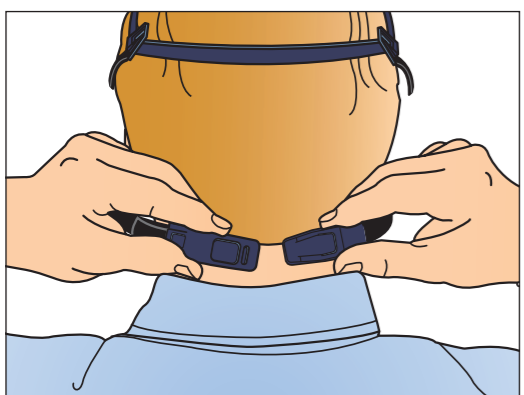

Attach the bottom straps directly against the back of the neck.

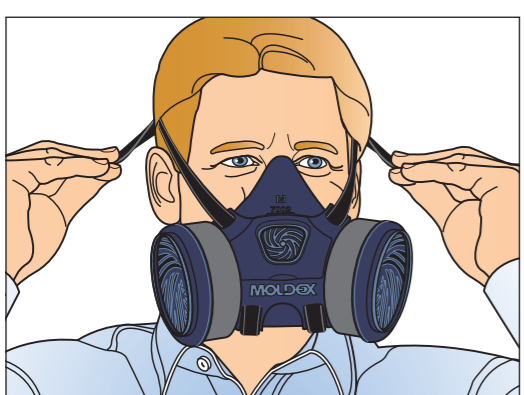


Tighten top straps first then the lower neck straps until you have a very snug and leak-free fit. Facepiece should not be loose or slide up or down the nose. Tighten by pulling on ends or loosen by pushing out on buckle tab. Do not overtighten. Further tighten top straps if necessary.

PERFORM A NEGATIVE OR POSITIVE SEAL CHECK EACH TIME BEFORE ENTERING A CONTAMINATED AREA.




Negative Pressure Seal Check: Cover both cartridges without pressing too hard against face, and gently inhale and hold your breath. The facepiece should slightly collapse. If air leakage is detected, re-adjust the position of the facepiece and the tension of both headstraps and repeat the seal check until leakage is eliminated.


DROP DOWN MODE

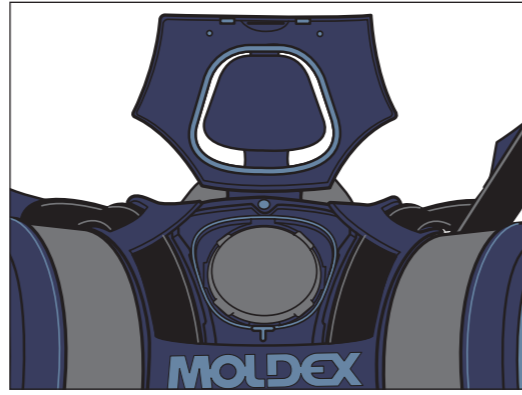


Open valve cover by pulling up on the latch. Pull the straps out from underneath the tabs of the strap channel. Close and snap shut the valve cover.

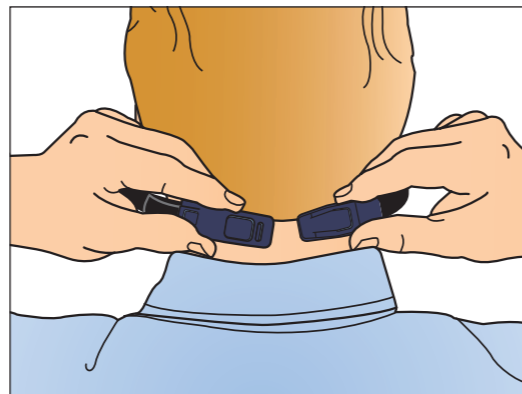

Attach the bottom straps directly against the back of your neck.

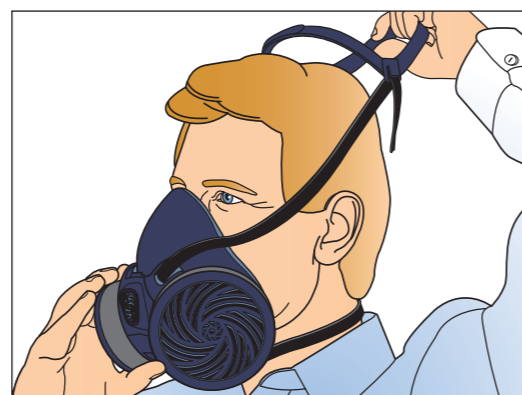

Adjust head cradle then pull the cradle to the top of the head so it rests on the crown.

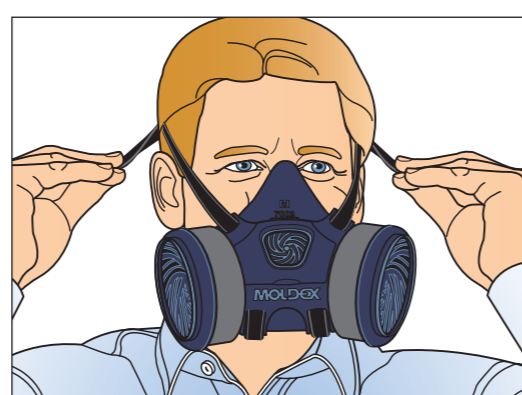

Tighten top straps first then the lower neck straps until you have a very snug and leak-free fit. Facepiece should not be loose or slide up or down the nose. Tighten by pulling on ends or loosen by pushing out on buckle tab. Do not overtighten. Further tighten top straps if necessary.



Positive Pressure Seal Check: Cover the exhalation valve vent without pressing too hard against face, and exhale gently to create a slight positive pressure. If air leakage is detected, re-adjust the position of the facepiece and the tension of both headstraps and repeat the seal check until leakage is eliminated.



7100 Organic Vapor Cartridge



7200 Acid Gas Cartridge
Chlorine/Hydrogen Chloride/Sulfur Dioxide/or Chlorine Dioxide/or Hydrogen Fluoride/or Hydrogen Sulfide.



7300 Organic Vapor/Acid Gas Cartridge
Organic Vapors/Chlorine/Hydrogen Chloride/Sulfur Dioxide/Or Chlorine Dioxide/Or Hydrogen Fluoride/Or Hydrogen Sulfide.



7400 Ammonia/Methylamine Cartridge



7500 Formaldehyde Cartridge



7600 Multi-Gas/Vapor Smart Cartridge
Organic Vapors/Ammonia/Methylamine/Chlorine/Hydrogen Chloride/Sulfur Dioxide/Or Chlorine Dioxide/Or Hydrogen Fluoride/Or Formaldehyde/Or Hydrogen Sulfide.



7990 P100 Filter Cartridge



7940 P100 Filter Disk



7960 P100 plus Nuisance OV Filter Disk



8910 N95 Pre-Filter



8970 R95 Pre-Filter




7140 Organic Vapor Cartridge/P100



7640 Multi-Gas/Vapor Smart Cartridge/P100



Grab lower lengths of head harness with each hand, just above each adjustment buckle, and while positioning chin in flange, pull harness over the head.

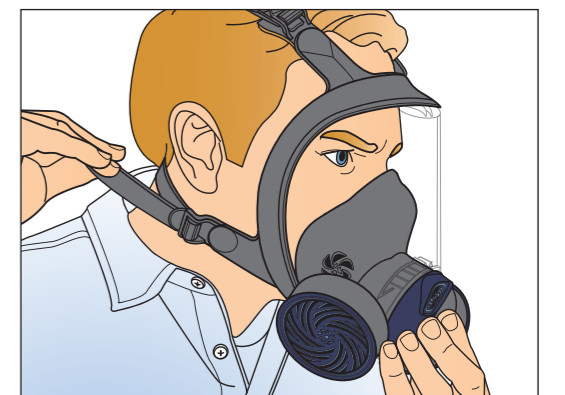


Push facepiece onto face and chin with one hand and position for most comfortable and secure seal while pulling and tightening neck tab of harness with other hand. Repeat for other neck tab. For easiest, most secure and best fit, always adjust neck harness tabs first before tightening top harness tabs.

PERFORM BOTH NEGATIVE AND POSITIVE SEAL CHECKS EACH TIME BEFORE ENTERING A CONTAMINATED AREA.



Negative Pressure Seal Check: Cover both cartridges without pressing too hard against face, then gently inhale and hold your breath. The facepiece should slightly collapse. If air leakage is detected, re-adjust the position of the facepiece and the tension of head harness and repeat the seal check until leakage is eliminated.

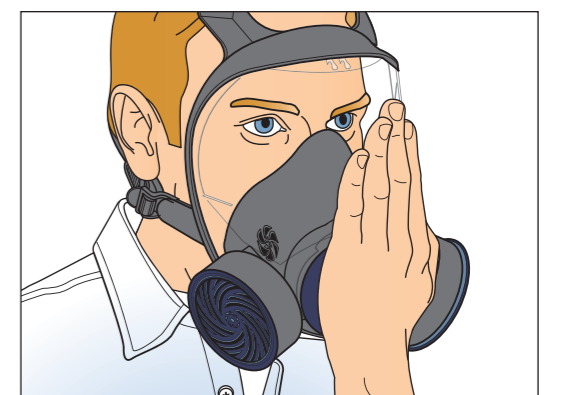

Positive Pressure Seal Check: Cover the exhalation valve vent without pressing too hard against face, then exhale gently to create a slight positive pressure. If air leakage is detected, re-adjust the position of the facepiece and the tension of head harness and repeat the seal check until leakage is eliminated.



7000/9000 ACCESSORIES AND REPLACEMENT PARTS




7001/9001 Facepiece, Small
7002/9002 Facepiece, Medium
7003/9003 Facepiece, Large



7020 Pre-Filter Retainer



7920 Piggyback Adapter

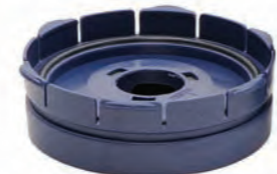

8020 Splash/Spark Protector

7000 Replacement Parts:
0072 Head Harness Assembly
0073 Diaphragm Kit
0074 Gasket Kit

Moldex, Ideas that wear well and the PVC-Free logo are registered trademarks.

9900-046 REV B 10/11



9000 Replacement Parts:
0073 Diaphragm Kit
0074 Gasket Kit
0092 Head Harness
0093 Face Shield Protectors
0094 Med./Large Nose Cup Assembly
0095 Small Nose Cup Assembly
0098 Spectacle Kit

WARNING: Before using these respirators, you must read manual for complete instructions. If you cannot obtain a proper fit, do not enter the contaminated area and see your supervisor. Follow all instruction and warnings on the use of this respirator and wear at all times of exposure. Failure to do so will reduce respirator effectiveness, wearer protection, and may result in sickness or death. For additional information, consult your Supervisor, read all information on box and phone +1 (800) 421-0668 or +1 (310) 837-6500 ext. 512/550. www.moldex.com