

2300 SERIES

N95 PARTICULATE RESPIRATOR WITH VALVE



STAY COOL ON THE JOB

Workers stay cooler with an exhale valve that reduces hot air build up. There's less breathing resistance and workers don't have to break midshift to cool off.

EASY FIT, MORE COMFORT

The molded nose bridge with soft foam nose cushion provides the wearer an easy comfortable fit. There's no metal noseband to adjust and the seal is maintained without pressure points.

DURA-MESH® SHELL LASTS LONGER


The exclusive Dura-Mesh shell protects the filter media so it stays cleaner-looking longer. The shell also resists collapsing in hot, humid environments so the respirator holds its shape longer. The result is fewer respirators used and lower costs.

SUITABLE FOR WELDING

2300N95 Series Particulate Respirators are suitable for most welding applications.

FEATURES

- Available in three sizes to fit most workers and increase OSHA compliance.
- Exclusive Dura-Mesh shell resists collapsing in heat and humidity.
- Molded nose bridge seals easily without a metal noseband.
- Facepiece is naturally contoured without pressure points.
- Straps are securely attached so they don't break at the seal.
- Softspun® lining for increased comfort and durability.
- Soft foam nose cushion for added comfort.
- Suitable for most welding applications.
- Meets heat and flame resistance in accordance with ANSI/ISEA 110-2009 Section 7.11.1.
- Exhale valve lets workers breath easy and stay cool.
- 100% PVC-Free for a greener alternative.

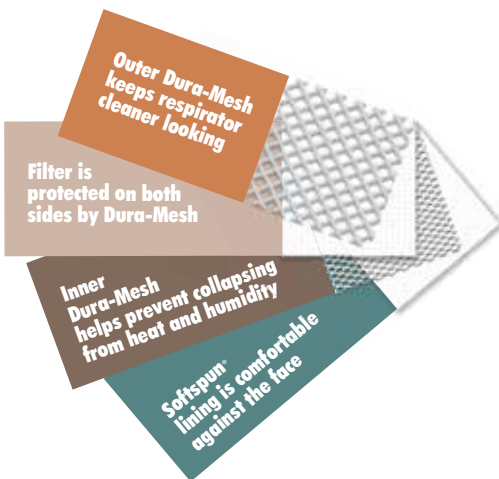

MOLDEX
Ideas that wear well.

N95 APPLICATIONS:

Grinding, Torch Cutting, Sanding, Metal Pouring, Sweeping, Metal Working, Bagging, Foundries, Stone Quarrying, Agriculture, Metal Machining, Construction Sites, Cement, Ceramics Manufacturing, Underground Mining, Timber/Lumber Mills, Polishing, Buffing, Lime, Poultry, Textiles, Welding, Brazing, Soldering.

2300 SERIES

N95 PARTICULATE RESPIRATOR WITH VALVE

Product Code	Size	Valve Type	Strap Material	Display Quantity	Case Quantity
2300N95	M/L	Button	Latex	10/Box	10 Boxes
2301N95	S	Button	Latex	10/Box	10 Boxes
2307N95	LP	Button	Latex	10/Box	10 Boxes
2300V Vending Pack	M/L	Button	Latex	2/Pack	40 Pack/Case

Product Code 2300N95 M/L
NSN Number 4240-01-496-0923

WARNING TO USER

- Follow all instructions and warnings on the use of this respirator and wear during all times of exposure. Failure to do so will reduce respirator effectiveness, wearer protection and may result in sickness or death.
- Before use, the user must first be trained by the employer in proper respirator use, in accordance with applicable safety and health standards, for the contaminant and exposure level in the assigned work area.
- Do not use respirators and other contaminants which can be dangerous to your health include those which you cannot see, taste, or smell.
- This product has not been sold with warnings or use instructions for personnel involved in healthcare or related situations, where there may be the possibility of contact with disease or biological hazards. If you are considering such uses, first call the Moldex Technical Service Department: +1 (800) 421-0668 or +1 (310) 837-6500 ext. 512/550

LIMITED WARRANTY IMPORTANT NOTICE TO PURCHASER

This limited warranty is made in lieu of the warranties of merchantability, fitness for particular purposes and all other warranties, express or implied. There are no other warranties which extend beyond the description on the face hereof. The physical standards and specifications of Moldex will be met by products sold. Exclusive Remedies: damages for the breach of this limited warranty are limited to the replacement of such quantity of Moldex, products proved to be defectively manufactured. Except as provided above, Moldex shall not be liable or responsible for any loss, damage, or liability, direct, indirect, incidental, special, or consequential, arising out of sale, use, or misuse, or the inability to use products by the user.

MOLDEX TECHNICAL ASSISTANCE

For more information call +1 (800) 421-0668 or +1 (310) 837-6500 ext. 512/550 or E-mail: sales@moldex.com, tech@moldex.com or visit www.moldex.com.



MOLDEX-METRIC, INC.
 10111 Jefferson Blvd.
 Culver City, CA 90232
 TEL: +1 (800) 421-0668 or
 +1 (310) 837-6500
 FAX: +1 (310) 837-9563
 Email: sales@moldex.com
 www.moldex.com

U.S. & CANADA CUSTOMER SERVICE
 Tel: +1 (800) 421-0668, Ext. 550/512



Moldex-Metric, Inc.
 Culver City, California, U.S.A.
 +1 (800) 421-0668



THIS RESPIRATOR IS APPROVED ONLY IN THE FOLLOWING CONFIGURATION:

TC-	PROTECTION	RESPIRATOR			CAUTIONS & LIMITATIONS*
		2300N95	2301N95	2307N95	
84A-0328	N95	X		X	A B C I M N O P
84A-2455	N95		X		A B C I M N O P

1. PROTECTION

N95-Particulate Filter (95% filter efficiency level) effective against particulate aerosols free of oil, time use restrictions may apply

2. CAUTIONS AND LIMITATIONS

- A- Not for use in atmospheres containing less than 19.5% oxygen.
- B- Not for use in atmospheres immediately dangerous to life or health.
- C- Do not exceed maximum use concentrations established by regulatory standards.
- J- Failure to properly use and maintain this product could result in injury or death.
- M- All approved respirators shall be selected, fitted, used, maintained in accordance with MSHA, OSHA, and other applicable regulations.
- N- Never substitute, modify, add or omit parts. Use only exact replacement parts in the configurations as specified by the manufacturer.
- O- Refer to user's instructions, and/or maintenance manuals for information on use and maintenance of these respirators.
- P- NIOSH does not evaluate respirators as surgical masks.

USE AGAINST:

- Particulate aerosols free of oil.

DO NOT USE AGAINST:

- Concentrations of contaminants which are unknown, or are immediately dangerous to life or health.
- Concentrations of particulates which exceed the maximum use concentration or 10 times the OSHA Permissible Exposure Limit, whichever is lower.
- Gases, vapors, asbestos, paint spray, sandblasting or particulate materials which generate harmful vapors.
- Oil-based mists.

RESTRICTIONS

- This respirator does not supply oxygen and must not be used in atmospheres containing less than 19.5% oxygen.
- Do not remain in contaminated area if any physical distress occurs, for example breathing difficulty, dizziness or nausea.
- Leave contaminated area and replace respirator if it is damaged, distorted, a proper fit can not be obtained or breathing becomes difficult.
- Prior to each use, carefully inspect the entire respirator, including filter media and strap/weld attachment area for tears and damage. Staple or strap/weld attachment perforations do not affect respirator performance.
- Do not alter, modify, or abuse this respirator.
- Store unused respirators in box/bag in a clean, dry, non-contaminated area.
- Dispose of respirator according to your employer's policy and local regulations.
- Dispose no later than thirty days after first use.
- Use respirator before the "use by" expiration date printed on box/bag.
- If used for welding, wear appropriate eye and face protection.



Printed on Recycled Paper