

Rockets

**REUSABLE
EARPLUGS
NEW NRR 27**

FEATURES

- Independently tested NRR 27, with a new sound dampening additive.
- NRR of 27 gives protection in most noisy environments.
- Easy grip handle lets earplugs easily slip into ear.
- Air pocket in tip provides cushioned comfort.
- Earplugs can be washed and reused.
- Pocket-Pak® carrying case provides hygienic storage of plugs between uses.
- Brightly colored for easy compliance checks.
- PVC-Free
- Available in corded, uncorded, and corded metal detectable models.



BENEFITS

NRR 27 PROTECTION

With an NRR of 27, the Rockets earplugs provide serious protection for most noisy environments. Tested independently in an accredited laboratory to ANSI S3.19-1974.

GET A GRIP

Rockets reusable earplugs are designed to give you a great grip. The easy grip handle lets them easily slip into the ear. And it's brightly colored for compliance checks.

AIR CUSHIONED FOR COMFORT

The air pocket in the tip gives cushioned comfort for all-day wear. The soft, flexible flanges provide a superior seal and fit most size ear canals.

WASH AND WEAR AGAIN


Rockets earplugs can be hand washed and reused. Each pair comes with a Pocket-Pak carrying case to keep them clean when not in use. The smooth shape slides easily into your pocket. No sharp edges.

MOLDEX TECHNICAL ASSISTANCE

Moldex provides all of the technical assistance required to set up a hearing protection program. For more information call 800/421-0668 ext. 512/550 or 310/837-6500 ext. 512/550.

MOLDEX
Ideas that wear well.®

Rockets

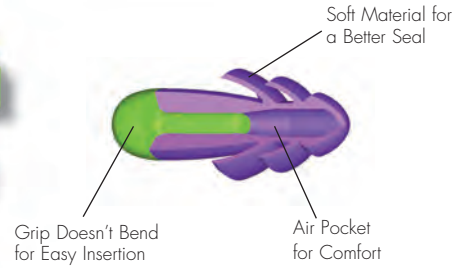

MEAN ATTENUATION DATA OF ROCKETS: NRR 27

Frequency (Hz)	125	250	500	1000	2000	3150	4000	6300	8000
Real Ear Attenuation (dB)	34.3	35.3	36.8	34.7	35.5	40.5	37.5	40.3	44.4
Standard Deviation (dB)	4.1	4.4	5.1	3.1	3.4	3.7	3.8	6.2	3.8

Tested ANSI S3.19-1974 by Michael & Associates, Inc., State College, PA.
EPA Noise Reduction Rating 27 decibels.

! WARNING TO USER

Rockets® Reusable Earplugs must be fitted and worn correctly to provide effective protection. Wash or clean hands before use. Plugs should be routinely washed with mild soap and warm water. **CAUTION:** Remove with a slow twisting motion to break the seal. Due to the tight seals, rapid removal may damage eardrum.

Use this laboratory-derived attenuation data for comparison purposes only. The amount of protection afforded in field use often is significantly lower depending on how the protectors are fitted and worn. Failure to follow all instructions could result in hearing loss or injury. Failure to obtain a proper fit will reduce effectiveness of hearing protectors and could result in hearing loss or injury. Rockets must only be used as part of a hearing conservation program that complies with applicable local safety and health regulations. Overprotection can be dangerous. The wearer must be able to hear warning signals. Wearers with hearing loss should exercise extreme caution. It is the employer's responsibility to ensure that the type of hearing protector and its NRR is appropriate for the user in their particular workplace. Failure to follow these warnings could result in serious injury or death.

MOLDEX-METRIC, INC.

10111 W. Jefferson Blvd. Culver City, CA 90232
800/421-0668 310/837-6500 FAX 310/837-9563
www.moldex.com e-mail: sales@moldex.com
Moldex is a registered trademark.
The bright green color is a registered trademark of Moldex-Metric, Inc.
U.S. Patents #D285,374, #4,850,347, #4,384,577.
Made in the U.S.A. 9701-713 REV H 11/07



TECHNICAL SERVICE

For technical assistance, information and training materials, call Moldex Technical Service Department, 800/421-0668 ext. 512/550 or 310/837-6500 ext. 512/550.

PACKAGING

6400 Uncorded

1 Pair/Pocket-Pak
50 Pocket-Paks/Dispenser Box
4 Dispenser Boxes/Case
200 Pair/Case

6405 Corded

1 Pair/Pocket-Pak
50 Pocket-Paks/Dispenser Box
4 Dispenser Boxes/Case
200 Pair/Case

6420 with Optional Cloth Cord

1 Pair/Pocket-Pak
50 Pocket-Paks/Dispenser Box
4 Dispenser Boxes/Case
200 Pair/Case

6485 Special Ops™ Corded

1 Pair/Pocket-Pak
50 Pocket-Paks/Dispenser Box
4 Dispenser Boxes/Case
200 Pair/Case

6404 Corded in Polybag

50 Polybags/Dispenser Box
4 Dispenser Boxes/Case
200 Pair/Case

6415 Metal Detectable Corded

1 Pair/Pocket-Pak
50 Pocket-Paks/Dispenser Box
4 Dispenser Boxes/Case
200 Pair/Case

6480 Special Ops™ Uncorded

1 Pair/Pocket-Pak
50 Pocket-Paks/Dispenser Box
4 Dispenser Boxes/Case
200 Pair/Case

LIMITED WARRANTY IMPORTANT NOTICE TO PURCHASER

This limited warranty is made in lieu of the warranties of merchantability, fitness for particular purposes and all other warranties, express or implied. There are no other warranties which extend beyond the description on the face hereof. The physical standards and specifications of Moldex will be met by products sold. **Exclusive Remedies:** damages for the breach of this limited warranty are limited to the replacement of such quantity of Moldex products proved to be defectively manufactured. Except as provided above, Moldex shall not be liable or responsible for any loss, damage, or liability, direct, indirect, incidental, special, or consequential, arising out of sale, use, or misuse, or the inability to use products by the user.

DISTRIBUTED BY:

IN CANADA:

Pacesetter Sales & Associates
20 Arthur Hall Drive
Sharon, ON L0G 1V0
Tel: 905/478-8042
Fax: 905/478-8010
www.pacesettersales.com

MOLDEX
Ideas that wear well!