

# meteors®



## METEORS® FOAM EARPLUGS

Meteors® unique curved design provides exceptional comfort. The contours follow the shape of the ear canal which means less pressure at the smallest diameter of the earplug. Meteors® innovative undercut design affords a secure fit, all day long. The large base helps provide proper insertion, fit, and removal. Plus, they have the highest independently tested NRR 33 available, a bright green color for easy compliance checks, and are PVC-Free.

## NEW METEORS® PLUGSTATION® EARPLUG DISPENSER


Give workers easy access to hearing protection. With the PlugStation®, you can afford to put earplugs in all the places they're needed. PlugStations increase compliance, because their high visibility dispenser increases awareness so you won't waste time looking for earplugs. With the PlugStation®, earplugs drop right into the palm of your hand so you don't have to worry about earplugs falling on the floor, or trays collecting dust and contaminants, because the chute is positioned right in front of the turn handle. 100% PVC-Free. Available in 500 Pair PlugStations. Includes mounting bracket and hardware.

## FEATURES


- 100% PVC-Free.
- Highest independently tested NRR 33.
- Soft, slow recovery foam and contoured shape molds easily to the ear canal for all day comfort.
- The contours follow the shape of the ear canal which means less pressure at the smallest diameter of the earplug.
- Meteors® innovative undercut design affords a secure fit, all day long.
- Meteors® are independently tested to ANSI S3.19-1974.
- The bright green color is a trademark of Moldex-Metric, Inc. and also provides easy compliance checks.



**The combination of our soft slow recovery foam and unique contoured design make Meteors® the market's premier foam earplug in comfort, fit and protection.**

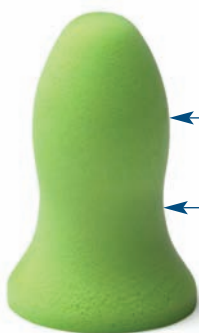

- ← Undercut tip designed to keep the earplug secured in the ear canal
- ← Narrower diameter for the smaller part of the ear canal provides all day comfort
- ← Large base seals the ear canal for proper fit and maximum NRR 33 protection.

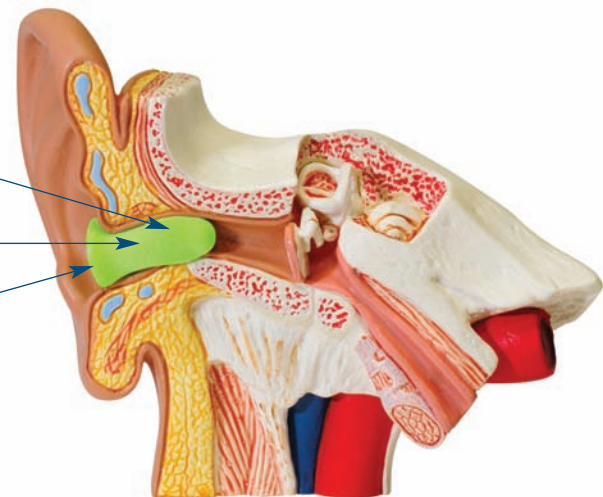



### ATTENUATION DATA / DATOS DE ATENUACIÓN / DONNÉES D'ATTÉNUATION

Tested According to ANSI Specs S3.19-1974 by Michael & Assoc., State College, PA.  
 Probado de acuerdo a las especificaciones ANSI S3.19-1974 Michael & Assoc., State College, PA.  
 Tests Conformes aux Spécs. ANSI S3.19-1974 Michael & Assoc., State College, PA.

Frequency (Hz) Frecuencia (Hz) Fréquence (Hz)	125	250	500	1000	2000	3150	4000	6300	8000		
Mean Attenuation (dB) Atenuación de Dato (dB) Atténuation Moyenne (dB)	42.4	43.5	45.9	39.8	36.8	44.5	46.6	48.1	47.4	NRR 33	CSA AL
Standard Deviation (dB) Desviación Standard (dB) Écart Standard (dB)	4.9	4.2	4.9	3.4	2.0	3.7	2.9	4.6	4.7		

### PACKAGING

#### 6870, Meteors® Earplugs, Uncorded

200 Pairs per Box  
 10 Boxes per Case

#### 6970, Meteors® Earplugs, Corded

100 Pairs per Box  
 20 Boxes per Case

#### 6875, Meteors® PlugStation®

500 Pairs per Dispenser  
 4 Dispensers per Case



### WARNING TO USER

1. Use these laboratory derived attenuation data for comparison purposes only. The amount of protection afforded in field use often is significantly lower depending upon how the protectors are fitted and worn.
2. Failure to follow all instructions could result in hearing loss or injury.
3. Failure to obtain a proper fit will reduce effectiveness of hearing protectors and could result in hearing loss or injury.
4. Over protection can be dangerous. The wearer must be able to hear warning signals.
5. Wearers with hearing loss should exercise extreme caution.
6. It is the employer's responsibility to ensure that the type of hearing protector and its rating is appropriate for the user in their particular workplace.
7. Use caution when working around machinery or any other equipment to ensure neck cord does not become caught or entangled.
8. Failure to follow these warnings could result in serious injury or death.
9. Meteors earplugs must only be used as part of a hearing conservation program that complies with applicable local safety and health regulations

### MOLDEX-METRIC, INC.

10111 W. Jefferson Blvd., Culver City, CA 90232  
 Tel: +1 (800) 421-0668 or +1 (310) 837-6500 Fax: +1 (310) 837-9563  
 Email: sales@moldex.com www.moldex.com

### CANADIAN CUSTOMER SERVICE

Tel: +1 (800) 421-0668, Ext. 517 Fax: +1 (310) 837-9563

Moldex Technical Service Department: +1 (800) 421-0668 or  
 +1 (310) 837-6500 ext. 512/550

Moldex, Ideas that wear well, Meteors and PlugStation are registered trademarks.  
 The bright green color are trademarks of Moldex-Metric, Inc.  
 U.S. Patents: #4,806,186, #D414,359, #D413,465, #5,954,229,  
 #6,241,120. Made in U.S.A.  
 9702-817 REV C 5/09

### LIMITED WARRANTY IMPORTANT NOTICE TO PURCHASER

This limited warranty is made in lieu of the warranties of merchantability, fitness for particular purposes and all other warranties, express or implied. There are no other warranties which extend beyond the description on the face hereof. The physical standards and specifications of Moldex will be met by products sold. **Exclusive Remedies:** damages for the breach of this limited warranty are limited to the replacement of such quantity of Moldex products proved to be defectively manufactured. Except as provided above, Moldex shall not be liable or responsible for any loss, damages, or liability, direct, indirect, incidental, special or consequential, arising out of a sale, use or misuse, or the inability to use products by the user.

### DISTRIBUTED BY:



Printed on Recycled Paper

