


Rock BAND®

Hearing Band

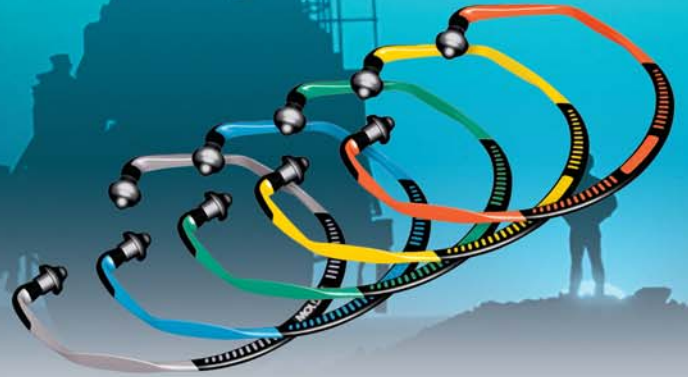

THE COMFORTABLE, COST EFFECTIVE ALTERNATIVE TO EARMUFFS

The hearing band younger workers have been waiting to wear. Five exciting colors make the Rock Band® popular with the new generation of workers. Two flexible arms distribute pressure evenly and the soft reusable pods gently cap off the ear canal. Appeal to all workers in search of a more comfortable hearing band. The Rock Band is not only the band younger workers want to wear, but also the perfect band for putting some excitement into a hearing conservation program.

MOLDEX TECHNICAL ASSISTANCE

Moldex provides all of the technical assistance required to set up a hearing protection program. For more information call +1 (800) 421-0668 ext. 512/550 or E-mail: sales@moldex.com or visit www.moldex.com.

FEATURES

- 100% PVC-Free.
- Soft, comfortable, reusable pods gently cap off the ear canal.
- Available in 5 exciting colors, each box comes with two of each color.
- Two flexible arms distribute pressure evenly for maximum comfort.
- Bright, fun colors appeal to the new generation of workers.
- NRR 22 (Under-the-Chin).
- The bright green color is a trademark of Moldex-Metric, Inc. and also provides easy compliance checks.



MOLDEX
Ideas that wear well.

ATTENUATION DATA

Tested According to ANSI Specs S3.19-1974 Michael & Assoc., State College, PA.

Frequency (Hz)	125	250	500	1000	2000	3150	4000	6300	8000		
Mean Attenuation (dB)	30.3	27.4	26.8	26.7	32.6	40.0	39.0	36.9	34.6	NRR 22	CSA BL
Standard Deviation (dB)	3.8	3.4	3.2	2.7	3.5	4.1	3.5	4.3	5.3		



WARNING TO USER

1. Use this laboratory-derived attenuation data for comparison purposes only. The amount of protection afforded in field use often is significantly lower depending on how the protectors are fitted and worn.
2. Failure to follow all instructions could result in hearing loss or injury.
3. Failure to obtain a proper fit will reduce effectiveness of hearing protectors and could result in hearing loss or injury.
4. The amount of protection will be reduced if band becomes damaged, cracked, distorted, or loses tension; or pads become worn, torn or misshapen. Replace with a new Rock Band.
5. Over protection can be dangerous. The wearer must be able to hear warnings signals.
6. Wearers with hearing loss should exercise extreme caution.
7. It is the employer's responsibility to ensure that the type of hearing protector and its NRR is appropriate for the user in their particular workplace.
8. Failure to follow these warnings could result in serious injury or death.

PACKAGING

6500 Rock Band®

10 Bands per Box (2 of Each Color in Each Box)
5 Boxes per Case

LIMITED WARRANTY IMPORTANT NOTICE TO PURCHASER

This limited warranty is made in lieu of the warranties of merchantability, fitness for particular purposes and all other warranties, express or implied. There are no other warranties which extend beyond the description on the face hereof. The physical standards and specifications of Moldex will be met by products sold. **Exclusive Remedies:** damages for the breach of this limited warranty are limited to the replacement of such quantity of Moldex products proved to be defectively manufactured. Except as provided above, Moldex shall not be liable or responsible for any loss, damages, or liability, direct, indirect, incidental, special or consequential, arising out of a sale, use or misuse, or the inability to use products by the user.

DISTRIBUTED BY:

MOLDEX-METRIC, INC.

10111 W. Jefferson Blvd., Culver City, CA 90232
Tel: +1 (800) 421-0668 or +1 (310) 837-6500 Fax: +1 (310) 837-9563
Email: sales@moldex.com www.moldex.com

Moldex Technical Service Department: +1 (800) 421-0668 or +1 (310) 837-6500 Ext. 512/550

CANADIAN CUSTOMER SERVICE

TEL: +1 (310) 837-6500, Ext. 517
FAX: +1 (310) 837-9563

Moldex, Ideas that wear well and Rock Band are registered trademarks. The bright green color is a trademark of Moldex-Metric, Inc. Made in U.S.A.
U.S. Patent #5,829,062
9702-751 REV B 07/09



MOLDEX
Ideas that wear well.