


WAVE BAND™

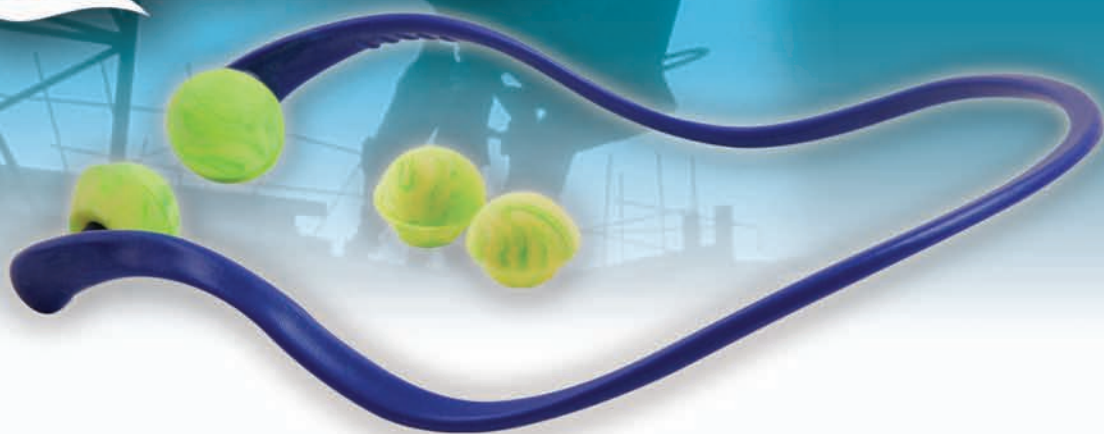

WAVE BAND™ HEARING PROTECTOR

The new Wave Band™ is ideal for situations which require users to remove and replace their hearing protection frequently. Comfortably worn under the chin, the sleek wave design allows the band to float, keeping it away from the wearer's body and clothing creating freedom of movement and negating the problem of noise transmission completely. Soft foam pods provide exceptional comfort and are angled to the ideal position for the ear canal. Innovative design and ultra light weight increase worker acceptance. An NRR rating of 22dB, it's independently tested to ANSI S3.19-1974. One pair of replacement foam pods is included in each package. 100% PVC-Free. The bright green color is a trademark of Moldex-Metric, Inc. and also provides easy compliance checks.

FEATURES

- 100% PVC-Free.
- NRR 22dB, independently tested to ANSI S3.19-1974.
- Ideal for situations which require users to remove and replace their hearing protection frequently.
- Comfortably worn under the chin, the sleek wave design allows the band to float, keeping it away from the wearer's body and clothing creating freedom of movement and negating the problem of noise transmission completely.
- Soft foam pods provide exceptional comfort and are angled to the ideal position for the ear canal.
- Innovative design and ultra light weight increase worker acceptance.
- One pair of replacement foam pods is included in each package.
- The bright green color is a trademark of Moldex-Metric, Inc. and also provides easy compliance checks.



WAVE BAND™



WAVE BAND™

ATTENUATION DATA FOR U.S. & CANADA

Tested According to ANSI Specs S3.19-1974 Michael & Assoc., State College, PA.

Frequency (Hz)	125	250	500	1000	2000	3150	4000	6300	8000	Under-the-Chin
Mean Attenuation (dB)	29.1	27.6	26.3	25.6	34.5	43.1	43.6	46.5	45.6	NRR 22 CSA B1
Standard Deviation (dB)	5.0	4.1	4.0	2.8	2.9	4.0	3.7	3.8	4.2	



WARNING TO USER

1. Use this laboratory-derived attenuation data for comparison purposes only. The amount of protection afforded in field use often is significantly lower depending on how the protectors are fitted and worn.
2. Failure to follow all instructions could result in hearing loss or injury. Failure to obtain a proper fit will reduce effectiveness of hearing protectors and could result in hearing loss or injury.
3. The amount of protection will be reduced if band becomes damaged, cracked, distorted, or loses tension; or pods become worn, torn or misshapen. Replace with a new Wave Band or pods as appropriate.
4. Over protection can be dangerous. The wearer must be able to hear warnings signals.
5. Wearers with hearing loss should exercise extreme caution.
6. It is the employer's responsibility to ensure that the type of hearing protector and its NRR is appropriate for the user in their particular workplace.
7. Failure to follow these warnings could result in serious injury or death.
8. The Wave Band must only be used as part of a hearing conservation program that complies with applicable local safety and health regulations.

Keep earplugs away from infants and small children as they may get caught in the windpipe and create a choking hazard.



MOLDEX-METRIC, INC.

10111 W. Jefferson Blvd., Culver City, CA 90232
Tel: +1 (800) 421-0668 or +1 (310) 837-6500 Fax: +1 (310) 837-9563
Email: sales@moldex.com www.moldex.com

CANADIAN CUSTOMER SERVICE

Tel: +1 (800) 421-0668, Ext. 517 Fax: +1 (310) 837-9563

Moldex Technical Service Department: +1 (800) 421-0668 or +1 (310) 837-6500 ext. 512/550

Moldex and Ideas that wear well and the random color patterns are registered trademarks. Wave Band and the bright green color are trademarks of Moldex-Metric, Inc. Made in the U.S.A. Patent pending. 9900-030 REV A 9/09



Printed on Recycled Paper

6520, WAVE BAND™

10 Bands per Box / 5 Boxes per Case

6505, WAVE BAND™ Replacement Pods

5 Pairs per Bag / 50 Bags per Case

LIMITED WARRANTY IMPORTANT NOTICE TO PURCHASER

This limited warranty is made in lieu of the warranties of merchantability, fitness for particular purposes and all other warranties, express or implied. There are no other warranties which extend beyond the description on the face hereof. The physical standards and specifications of Moldex will be met by products sold. **Exclusive Remedies:** damages for the breach of this limited warranty are limited to the replacement of such quantity of Moldex products proved to be defectively manufactured. Except as provided above, Moldex shall not be liable or responsible for any loss, damages, or liability, direct, indirect, incidental, special or consequential, arising out of a sale, use or misuse, or the inability to use products by the user.

DISTRIBUTED BY:



MOLDEX
Ideas that wear well.